# Measuring couplings (5)

## Connections for pressure gauges

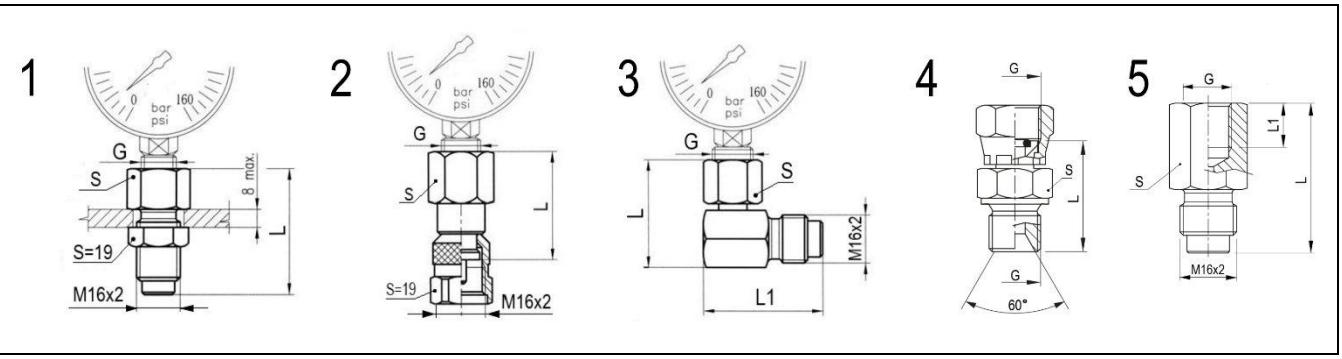


| fig. | description | pressure [bar] | index (with free flow) | index (with pressure surge damping) | size thread G | S [mm] | L (L / L1) [mm] |
|---|---|---|---|---|---|---|---|
| 1 | Connection for pressure gauge, male M16x2 thread, bulkhead | 630 | PS-620-08-204-00 | PS-620-08-204-00-1 | 1/4” BSP | 19 | 50 |
| | | | PS-620-08-208-00 | PS-620-08-208-00-1 | 1/2” BSP | 27 | 58 |
| | | | PS-620-08-304-00 | PS-620-08-304-00-1 | 1/4” NPTF | 19 | 50 |
| | | | PS-620-08-308-00 | PS-620-08-308-00-1 | 1/2” NPTF | 27 | 58 |
| 2 | Connection for pressure gauge, GW M16x2 | 630 | PS-620-09-204-00 | PS-620-09-204-00-1 | 1/4” BSP | 19 | 34 |
| | | | PS-620-09-208-00 | PS-620-09-208-00-1 | 1/2” BSP | 27 | 39 |
| | | | PS-620-09-304-00 | PS-620-09-304-00-1 | 1/4” NPTF | 19 | 34 |
| 3 | Connection for pressure gauge, male M16x2 thread, adjustable angle | 630 | PS-620-10-204-00 | PS-620-10-204-00-1 | 1/4” BSP | 17 | (40 / 40) |
| | | | PS-620-10-208-00 | PS-620-10-208-00-1 | 1/2” BSP | 27 | (40 / 42,7) |
| 4 | Adaptor for pressure gauge with male / female BSP thread | 400 | PS-630-02-204-00 | - | 1/4” BSP | 17 | 28 |
| | | | PS-630-02-208-00 | - | 1/2” BSP | 27 | 36 |
| 5 | Connection for pressure transducer, male M16x2 thread | 630 | PS-620-17-204-00 | - | 1/4” BSP | 19 | (43 / 12,5) |

Notes: NBR seal.

## Connectors and accessories

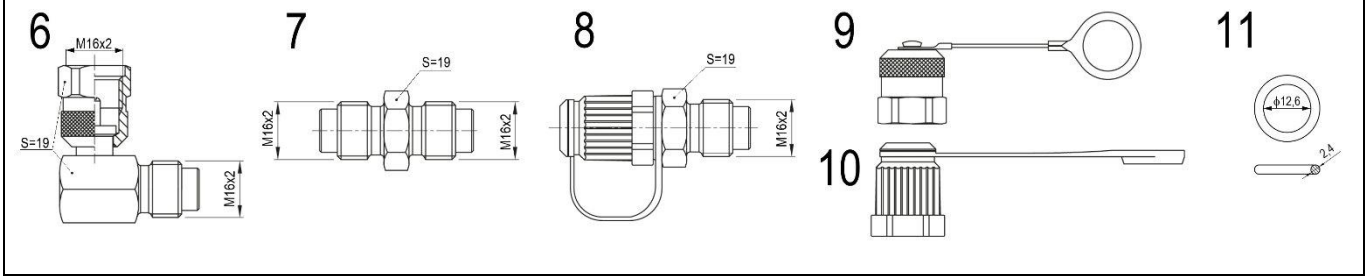


| fig. | description | pressure [bar] | index | notes |
|---|---|---|---|---|
| 6 | 90° angle connector female M16x2 / male M16x2 thread | 630 | PS-620-13-000-00 | NBR seal |
| 7 | Straight connector male M16x2 / male M16x2 thread, with a free flow | | PS-620-14-162-00 | |
| 8 | Connector male M16x2 / male M16x2 thread, with check valve, plastic cap | | PS-620-15-162-00 | |
| 9 | Metal M16x2 coupling cap with cable | - | PS-630-03-162-01 | - |
| 10 | Plastic M16x2 coupling cap | | PS-630-03-620-00 | - |
| 11 | Anti-vibration O-ring 12.6 mm x 2.4 mm NBR 70 Sh | | PS-000-03-1224-00 | - |